



**Owners and Operations Manual
Dog Shammy Models G220D, DX and DX50**

Important Safety Instructions

**READ ALL INSTRUCTIONS BEFORE OPERATING
THIS APPLIANCE**

WARNINGS


1. DO NOT leave the blower unattended. Unplug from outlet when not in use.
2. DO NOT allow the blower to be used as toy.
3. DO NOT permit children to operate the blower.
4. DO NOT use the blower with a damaged cord or plug.
5. DO NOT alter the cord or plug in any way.
6. CONNECT ONLY to a grounded polarized power outlet.
7. ALWAYS hold onto the nozzle and hose end when operating the blower. Letting go of the nozzle could cause injury or damage.
8. DO NOT immerse the blower in water or permit it to be in standing water. This will cause electrical shock.
9. DO NOT let the air inlets become clogged. Overheating may occur. Never use without the air filters in place.
10. DO NOT disassemble the unit. This will void the warranty. No user serviceable parts are accessible. Contact Dog Shammy for service if required.
11. Use safety goggles when operating blower. DO NOT blow debris in the direction of another person. Be careful not to blow air into the dog's face, eyes, ears, nose or body orifices.
12. To avoid the risk of injury or damage to the blower, use only attachments supplied by Dog Shammy.
13. If an additional extension cord is required, use only an extension cord suitable for outdoor use.

SAVE THESE INSTRUCTIONS

DO NOT MODIFY CORD. RISK OF ELECTRIC SHOCK IF CORD OR PLUG IS MODIFIED.

CAUTION: DO NOT DROP THIS BLOWER APPLIANCE. IF HOUSING CASE IS DAMAGED, DO NOT USE BLOWER. RETURN TO DOG SHAMMY FOR REPAIR. DAMAGE CAUSED BY BLOWER BEING DROPPED IS NOT COVERED UNDER WARRANTY.

Blower Assembly

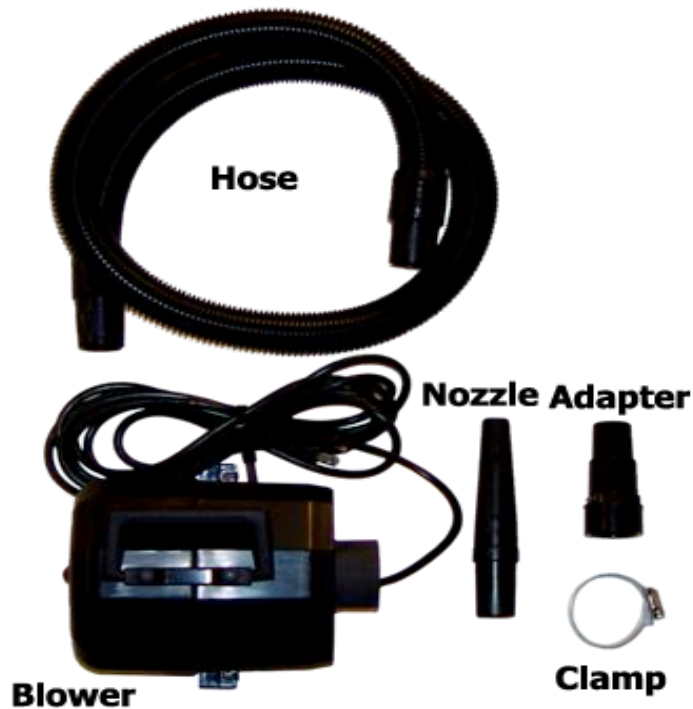

Parts List Model G220D, G220DX, G220D50

1. Blower Body with Cord
2. Hose – 10' Heavy-Duty
3. Nozzle – Soft PVC
4. Adapter (assembled)
5. Clamp (assembled)

Note: Clamp and Adapter are already assembled to blower body

Model G220D50 is identical but with 230V, 50 HZ motor and no plug is on the cord. You must install the plug specific to your country before using!

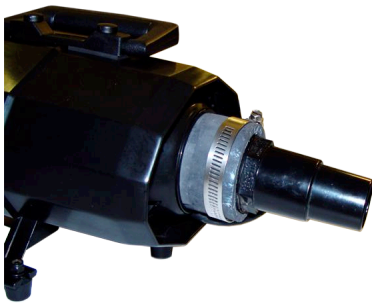


FIGURE 1 – INSTALL ADAPTER

NOTE: This step is now performed at Dog Shammy.

1. Slip clamp over rubber adapter on blower body.
2. Slip Adapter into the rubber adapter till it bottoms out.
3. Tighten clamp to secure Adapter to blower body.



FIGURE 2 – INSTALL HOSE TO ADAPTER

Press fit end of hose over the adapter. Fit should be very snug.



FIGURE 3 –HOSE TO NOZZLE

Slip hose over nozzle. Fit should be very snug.

Operation



FIGURE 4 – BLOWER CONTROL

The on/off toggle switch is located on the end of the blower body.

TWO-YEAR LIMITED WARRANTY

Dog Shammy Dog Dryers are manufactured in the USA by **Carelli, LLC**. **Carelli, LLC** warrants this product to be free from defects in material and workmanship for a period of TWO (2) years from date of purchase. If a product proves to be defective in material or workmanship during the warranty period, **Carelli, LLC** will, at its sole option repair or replace the defective product. Warranty is voided under the following circumstances: Connection to improper voltage, altering the Dog Shammy dryer, dropping or immersing in water. **Warranty excludes normal wear such as carbon brushes.** **Carelli, LLC's** liability is limited to the cost of repair or replacement of the product and shall not be liable for damage to property, pets or persons caused by defects in the product or any other damages whether incidental, consequential or otherwise.

For Service, please contact us at:

sales@dogshammy.com

**DOG SHAMMY DOG DRYERS –
NO MORE BAD HAIR DAYS!**

Assembly of the Foot Pedal Controller



This model of Dog Shammy dryer is equipped with a three (3) function switch which allows the user to select from “continuous ON” operation to “Foot Pedal” operation. The middle switch position is the OFF position.



TO USE THE FOOT CONTROL

Connect the supplied small hose to the switch on the back of the Dog Shammy Dryer as shown. This is a press fit. DO NOT force the hose onto the switch nipple.



The other end of the small hose is pressed onto the foot pedal control nipple as shown.

Operation of the Foot Pedal Control



To use the Foot Pedal Control, move the switch to the “Foot Pedal” position on the Dog Shammy Dryer. Place the foot pedal on the floor in a convenient location. Simply press the foot pedal with your foot to activate. Remove your foot to stop the dryer.

For Continuous operation, move the switch to the “ON” position. This bypasses the foot pedal control and allows the dryer to operate until you turn the switch to the OFF position.

OPERATION OF THE VARIABLE SPEED DOG SHAMMY DRYER



We have designed the **Dog Shammy** dryers to be the easiest to use. The operation of the variable speed model is very simple yet offers the most features of any dryer on the market today.

TO USE: Simply turn the control from “OFF” to any desired speed. Note that the control does have an “OFF” position which clicks when you turn it – much like any other switch.

We have pre-set the low position to a setting that permits continuous operation without damage to the blower motor.

To further lower the airflow, simply remove the nozzle from the end of the hose. We recommend this for drying sensitive areas of your dog.

That’s all there is to it! We have engineered the variable speed **Dog Shammy** dryer for long life, ease of use and the grooming features you desire!